


- Apply small amount of tape in middle of line bundles (to avoid frayed ends).
- Cut the bundles of line into 2.
- Run the outrigger line up through each of the eye guides from the bottom up to the very top eye.
- Pass line through float and then through the barrell sleeve, through the snap swivel assembly and back through the barrell sleeve.
- Tie a double knot and then attach the release clip to swivel assembly.
- Using the other end of the line, run line through the pulley.
- Run the line through the barrel swivel, through the snap swivel assembly and back through the barrel swivel.
- Tie a figure 8 knot and adjust slack as needed. Attach swivel assembly to the release clip.
- Secure pulley/bungee assembly to pad eye. Remove slack by sliding the lock swivel down and/or cut off excess line on the outside of locking swivel.

*The pad eyes that the bungee hooks to on the gunwale is usually installed about 6" toward the stern between the outrigger holder and the rod holder. On the T-Top the pad eye is usually hooked on the outer t-top ring so it can be easily reached.

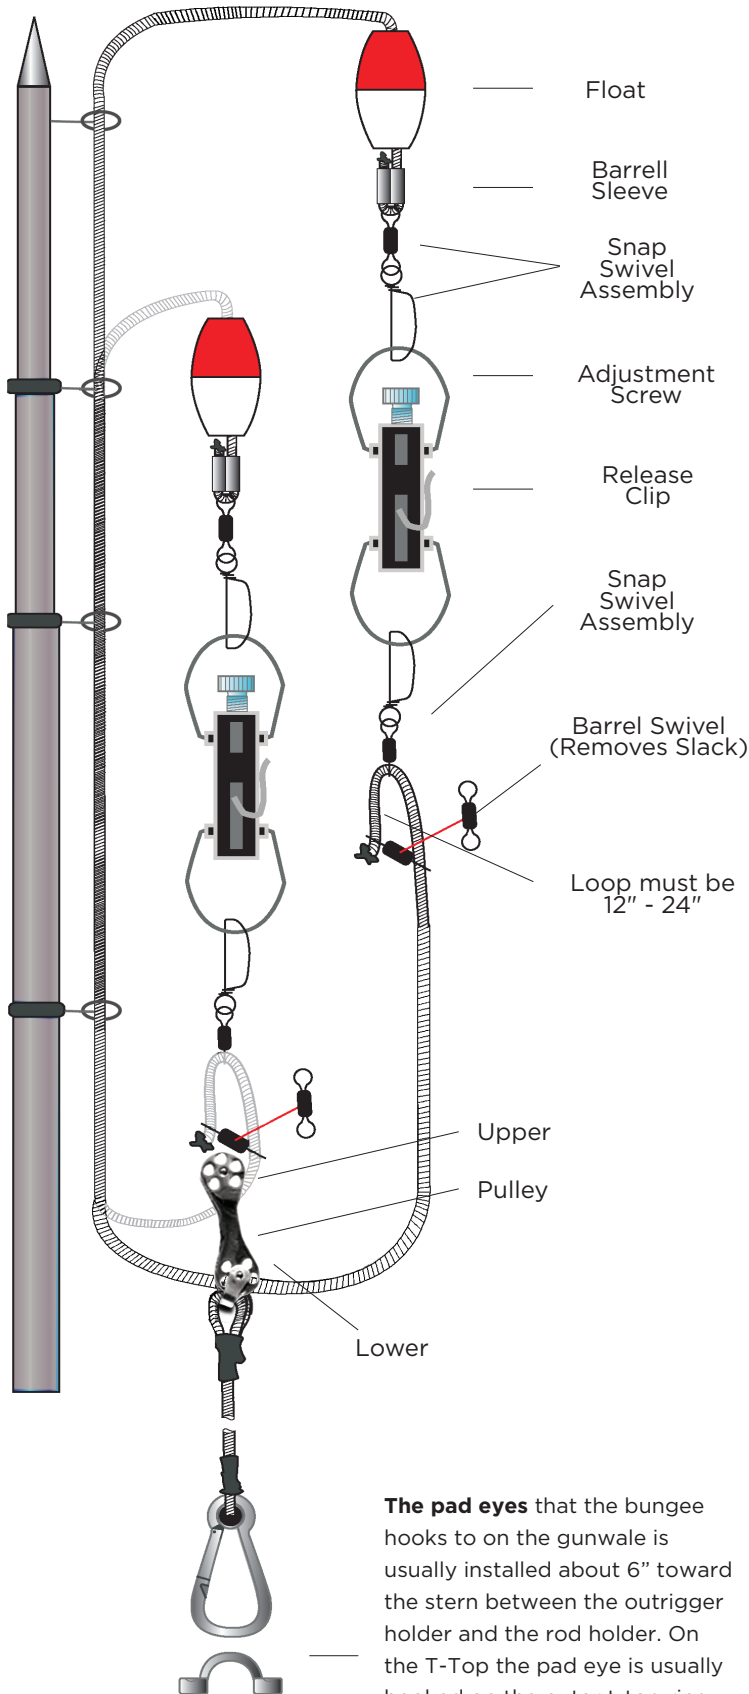

The pad eyes that the bungee hooks to on the gunwale is usually installed about 6" toward the stern between the outrigger holder and the rod holder. On the T-Top the pad eye is usually hooked on the outer t-top ring so it can be easily reached.

- Apply small amount of tape in middle of line bundles (to avoid frayed ends).
- Cut the two bundles of line into 2.
- Run the outrigger line (1) up through each of the eye guides from the bottom up to the very top eye.
- Run top outrigger line (2) up to the 2nd from the end eye guide. Do the following for both lines (1&2):
 - A) Pass line through float and then through the barrel sleeve, through the snap swivel assembly and back through the barrel sleeve.
 - B) Tie a double knot and then attach the release clip to swivel assembly. (The adjustment screw on the release clip faces up.)
 - C) Using the other end of the line (1), run line through the pulley. Line (1) goes through the lower pulley while line (2) goes to the upper pulley.
 - D) Run each of the lines through the barrel swivel, through the snap swivel assembly and back through the barrel swivel.
 - E) Tie a figure 8 knot and adjust slack as needed. Attach swivel assembly to the lower release clip.
- Secure double pulley/bungee assembly to pad eye. Remove slack by sliding the lock swivel down and/or cut off excess line on the outside of locking swivel
- Secure pulley/bungee assembly to pad eye. Remove slack by sliding the lock swivel down and/or cut off excess line on the outside of locking swivel.